

S.M.S.L

PL150

USER MANUAL

The contents of this manual may be changed with the edition, and are subject to change without notice.

Ver 1.0



Safety Notes

- Install this unit in a well ventilated, cool, dry, clean place-away from direct sunlight, heat sources, vibration, dust, moisture, or cold..
- Use the voltage specified on this unit Only. Using this unit with a higher voltage than specified is dangerous and may cause fire , damage to this unit, or personal injury. Our company will not be held responsible for any damage resulting from the use of this unit with a voltage other than that specified.
- Do not attempt to modify or fix this unit by yourself. Contact a person or customer service when any service is needed. The cabinet should never be opened for any reason.
- When not planning to use this unit for long periods of time (i.e. when going on vacation), disconnect the power cable from the AC wall outlet.

Important note:

The product specifications and information mentioned in this manual are for reference only. The content of this manual is subject to change without notice.



Warranty Terms

1.The Term of Service

Foshan Shuangmusanlin Technology Co., Ltd promises to offer good-quality products. If the product is broken in 7 days after purchasing when you use it normally, you can choose to send it back for return, replacement or repairing (only the product does not affect the second sales can be returned). Repairing for free in one year if you use it normally.

2.Date of purchase is in accordance with the date on invoice or receipt used by seller, and if you buy it on line, you can show the screenshot of trade.

3.If an inappropriate usage causes the unit damaged, the warranty will be void. As below.

- All damages by inappropriate use, including using it under non-normal working environment or without following the instructions.
- Dismantling, refitting, repairing by user in private.
- Causing damage by using some fittings instead of the designative or accredited ones.
- Cannot provide credible proof of purchase.

4.Sending it back to our company for repairing.

5.Contact your S.M.S.L Audio reseller for a return or replacement.



Features

- Original Philips Slot-in mechanical components,supporting 8cm and 12cm CD;
- Built-in CS43198 DAC chip to bring out the best performance of CD;
- Built-in 2nd PLL circuit to significantly reduce CD reading JITTER;
- Built-in optical and coaxial raw digital output;
- Built-in high-power HPA and 3.5mm, 4.4mm headphone output jacks;
- New optically clear bond color IPS LCD display;
- Equipped with full-function remote control;
- High-quality aluminum alloy panel, high-quality gold plated input and output jacks.



Packing list

- 1 x SMSL PL150
- 1 x USB cable
- 1 x Remote control
- 1 x User manual
- 1 x Warranty card



Specifications

Input	CD	
Output	RCA/3.5mm or 4.4mm headphone/Optical/Coaxial	
CD TYPE	CD/CD-R/CD-RW/MP3 CD	
CD SIZE	8cm/12cm	
Headphone output power	32 Ω	60mW x2
THD+N	0.001%	
SNR	110dB	
Power consumption	4W	
Standby power	<0.1W	
Size	205x42.8x144.7mm(WxHxD)	
Weight	1.145kg/2.52lbs	

SMSL reserves the right to make improvements which may result in specification or feature changes without notice.

Remote control

- If the remote control is still ineffective when it is close to the unit, replace it with a new battery.
- If the user does not use the remote control for a long time, remove the battery of the remote control.
- Dispose of used batteries in accordance with local regulations on battery disposal.


Operating the remote control

Note

This remote controller use
2 x R03/AAA batteries.



Display Interface and Instructions

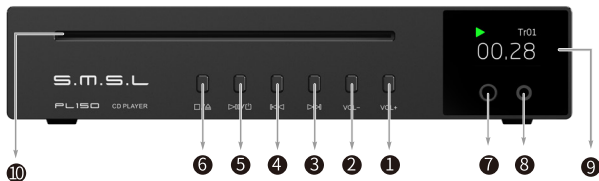

- | | | |
|--|------------------------------------|----------------------------|
| 1 Volume up(HPA)* | 2 Volume down(HPA)* | 3 Next/Fast reverse |
| 4 Previous/Fast forward | 5 Play_pause / power on_off | 6 STOP/ Open_Close |
| 7 4.4mm headphone jack | 8 3.5mm headphone jack | 9 Display |
| 10 Disc slot | 11 Coaxial output | 12 Optical output |
| 13 DC IN (5V/2A)
(Plug Size 5.5x2.1mm) | 14 RCA output | |

* The volume increase or decrease is only valid for the headphone output, and the line output volume is not adjustable.



Instructions

■ Turn on/off

- **Plug in to power on:** Plug in the power cord and the unit will automatically turn on;
- **Button to power on:** Press and hold the [▷⏏/⏻] button on the panel or press the [⏻] button on the remote control;
- **Button to power off:** In the power-on state, press and hold the [▷⏏/⏻] button on the panel or press the [⏻] button on the remote control;
- Please plug off the unit if it will not use for a long time.

■ CD Playback

- Insert a disc with the cover facing up.
- CD player read the disc's TOC and shows total tracks.
- Press play button on remote or panel to playback.

■ Stop/Eject

- Press the stop button [□/⏏] on the panel or remote control [□] to stop the current playback;
- Under stop status, pressing stop button eject to the disc.
- Press the [⏻] button on the remote control to eject or load the disc;

■ Pause Playback

- During CD playback, if user want to interrupt the playback and enter the pause state for a short period of time, user can press [>||] on the panel or the remote control, at this time, the display shows [||] on the upper left side of the screen, and if user press the button again, it will return to normal playback state.

■ Previous Track

- In the CD playback state, press the previous track button [<<] on the panel or remote control, which will interrupt the original purpose of the track and enter into the playback of the previous track.

■ Next Track

- In the CD playback state, if you want to skip the current track, just press the next track button [>>] on the panel or remote control to skip to the next track, which interrupts the playback of the original track and enters into the playback of the next track.

■ Jump to a specific track

- In the CD playback state, if you want to skip to the specified track, user can press the number combination on the remote control to jump to the specified track; if you want to jump to the 12th track, you need to press "1" and "2" on the remote control.

■ Random

- In the CD playing state, press the random play button [] on the remote control, the corresponding icon will be shown on the display. The unit will randomly play the disc tracks until all the tracks are played.
- Press the random play button or stop button again to cancel the random play status.

■ Repeat

- If user want to repeat the current track continuously, press the Repeat Play button on the remote control once, the display will show the icon []. If you continuously replay the tracks on the whole disc, press the Repeat Play button again and the display shows the [] icon. If you want to cancel the Repeat Play function, press the Repeat Play button again.

■ Mute

- Press the mute button on the remote control while playing back, the display will display [MUTE], and the earphone or RCA analog output will be muted.
- In the Muting state, press the mute button on the remote control again, and the earphone or RCA output will resume the normal playback state.
- Mute has no effect on digital output!

S.M.S.L